

Cuisinart®

ClearView 4-Qt Glass Basket Air Fryer

AFC-4



GARANTÍA DE
UN AÑO

Instruction Booklet

TRADUCCIÓN AL ESPAÑOL INCLUIDA



For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

CONTENTS

Important Safeguards	2
Special Cord Set Instructions	3
Features and Benefits	4
Getting to Know the Control Panel	5
Before First Use	6
Operation	6
Air Frying Tips & Hints	6
Air Fryer Chart	7
Troubleshooting	8
Beyond Air Frying	9
Cleaning and Maintenance	9
Warranty	10

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Read all instructions.**
2. **UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING. Allow to cool before cleaning, handling, or putting on or taking off parts.**
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electric shock, do not immerse cord or plugs or the main body of the Cuisinart® Digital Air Fryer in water or other liquids. See Cleaning and Maintenance, page 9.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, after the appliance has malfunctioned or has been dropped or damaged in any way, or is not operating properly. Return the Cuisinart® Digital Air Fryer to the store or retailer where purchased for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injuries.
8. Do not use outdoors.

9. Do not let cord hang over the edge of the table or counter, where it could be pulled on inadvertently by children or pets, or touch hot surfaces, which could damage the cord.
10. Do not place the Cuisinart® Digital Air Fryer on or near a hot gas or electric burner or in a heated oven.
11. Do not use this Cuisinart® Digital Air Fryer for anything other than its intended purpose.
12. Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the Cuisinart® Digital Air Fryer.
13. To avoid burns, use extreme caution when removing Cuisinart® Digital Air Fryer accessories or disposing of hot grease.
14. **When not in use, always unplug the unit.** Do not store any materials other than manufacturer's recommended ovenproof accessories in this Cuisinart® Digital Air Fryer.
15. Do not place any of the following materials in the Cuisinart® Digital Air Fryer: paper, cardboard, plastic, and similar products.
16. Do not cover any part of the Cuisinart® Digital Air Fryer with metal foil. This will cause the unit to overheat.
17. Oversize foods, metal foil packages, and utensils must not be inserted in the Cuisinart® Digital Air Fryer, as they may create the risk of fire or electric shock.
18. A fire may occur if the Cuisinart® Digital Air Fryer is covered or touching flammable materials such as curtains, draperies, or walls when in operation. Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets.
19. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating the risk of electric shock.
20. Do not attempt to dislodge food when the Cuisinart® Digital Air Fryer is plugged into an electrical outlet.
21. **WARNING:** To avoid possibility of fire, NEVER leave the Cuisinart® Digital Air Fryer unattended during use.
22. Use recommended temperature settings for all air frying.
23. Do not rest cooking utensils or baking dishes on the window or on top of the unit.
24. Press the Start/Stop icon  after use to turn off the Cuisinart® Digital Air Fryer.

25. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create the risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
26. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
27. To disconnect, press the Start/Stop icon  to turn off, then remove plug from wall outlet.
28. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
29. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.

30.  This symbol means: The surface of this product is hot; please be careful when touching it.

31. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, press the Start/Stop icon , then remove plug from wall outlet.
32. This appliance is not intended to be operated by means of an external timer or separate remote-control system.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY NOT INTENDED FOR COMMERCIAL USE

NOTICE

This appliance has a grounded plug as a safety feature. This plug will fit into a grounded outlet. Do not attempt to modify the plug in any way.

Please read and keep these instructions handy. These instructions will help you to safely operate your Cuisinart® Digital Air Fryer and get the most out of it with consistent, professional results.

SPECIAL CORD SET INSTRUCTIONS

- A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - If the appliance is of the grounded type, any extension cord should be a grounded-type 3 prong cord.

FEATURES AND BENEFITS

1. **Digital Control Panel**

Sleek touchscreen interface with intuitive controls for selecting time, temperature, and cooking functions. The digital display shows selected temperature and countdown timer.

a. **Cooking Functions:** Air Fry, Bake, Broil, Recrisp, Keep Warm.

b. **Custom Favorites:** Use Custom Fav 1 and Custom Fav 2 to save two preferred time, temperature, and cooking function settings.

c. **Shake Reminder:** Optional alert halfway through cooking to flip or shake food for crispier, more even results.

d. **Interior Light:** Illuminates the basket for easy viewing through the windows.

2. **Overhead Viewing Window**

Large clear viewing window on the top of the unit allows you to monitor food without removing the basket.

3. **Glass Air Fryer Basket**

Transparent borosilicate glass basket offers a clear view of food while cooking and features a spacious 7.75" x 7.75" surface for single-layer crisping. Freezer safe and dishwasher safe for easy cleanup.

Best Practice

Borosilicate glass is thermal shock resistant; however, avoid sudden extreme temperature changes. If frozen, allow the basket to sit at room temperature for at least 15 minutes before use.

4. **Crisper Plate**

Promotes even cooking and crisping. Must be inserted in the basket during use. PFAS-Free* nonstick ceramic-coated and dishwasher safe. Silicone feet ensure a secure fit in the basket. *The nonstick ceramic-coated crisper plate has always been manufactured PFAS free.

5. **Basket Lid**

Designed for convenience, the lid keeps leftovers fresh and easy to store. Be sure the glass bowl is fully cooled before securing the lid.

6. **High-Performance Heating System (not shown)**

Direct infrared heat from the top coil heater ensures better texture and taste, delivering bold flavor and precision crisp.

7. **Automatic Pause Feature (not shown)**

Cooking automatically pauses when the basket is removed and resumes when returned.

8. **Automatic Keep Warm (not shown)**

Keep Warm mode activates post-cook to maintain food temperature until ready to serve.

9. **Quiet Operation (not shown)**

High-efficiency fan system engineered for whisper-quiet performance.



GETTING TO KNOW THE CONTROL PANEL

The AFC-4 features a sleek, intuitive touchscreen control panel designed for ease and confidence in cooking. Here's a breakdown of each button and function:

1. Cooking Functions

Select from five core cooking modes:

Air Fry – High-speed fan for crispy results.

Bake – Ideal for baked goods; includes automatic preheat.

Broil – Direct heat from above; includes automatic preheat.

Recrisp – Revives crunch in leftovers and cooked foods.

Keep Warm – Maintains food temperature until ready to serve.

Each function displays default time and temperature, which can be adjusted using the  and  icons.

2. Custom Favorites

Custom Fav 1 & 2 – Save your preferred time, temperature, and cooking function. To save a setting: Long-press either Custom Fav button for 3 seconds after selecting your desired parameters.

3. Shake Reminder

Optional alert that beeps during cooking to remind you to flip or shake food for even crisping. Automatically activates air fry function. You can turn off it off before or during the cooking cycle by pressing the Shake Reminder button. When deactivated during cooking, the button will dim.

4. Time & Temperature Controls

Tap the  icon to enter time-setting mode. Tap the  icon to enter temperature-setting mode. Use the   buttons to adjust time or temperature. Long-press to scroll through options more quickly.

5. Start/Stop

Tap the  icon to begin cooking. Tap again to stop.

6. Power


Tap the  button to turn the unit on or off. In standby mode, the display shows “----”. In power-saving mode, the display and lights turn off.

7. Interior Oven Light

Tap to illuminate the interior for 45 seconds. Automatically turns on when the basket is removed.

8. Digital LED Display

Shows countdown timer and temperature. Alternates between time (9 seconds) and temperature (3 seconds) during cooking.

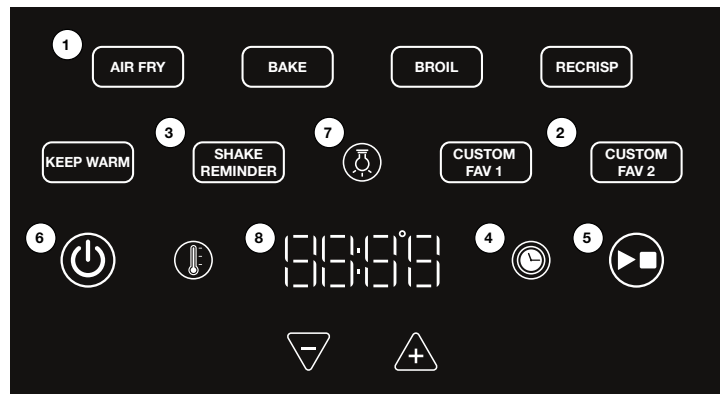

BEFORE FIRST USE

1. Carefully unpack the unit and remove any packaging and promotional labels.
2. Place your Cuisinart® Digital Air Fryer on a flat, level surface.
3. Keep the air fryer 2 to 4 inches away from the wall or from any objects on the countertop. Do not use on heat-sensitive surfaces.

NOTE: OBJECTS SHOULD NOT BE STORED ON TOP OF THE AIR FRYER. IF THEY ARE, REMOVE ALL OBJECTS BEFORE YOU TURN ON YOUR AIR FRYER. THE EXTERIOR WALLS GET HOT WHEN IN USE. KEEP OUT OF REACH OF CHILDREN.

4. Confirm that there is nothing inside the Cuisinart® Digital Air Fryer except the air fryer basket and crisper plate.
5. Wash the air fryer basket and crisper plate thoroughly in warm, soapy water and then dry completely.
6. Plug power cord into the wall outlet.

OPERATION

Follow these simple steps to get started:

Place the Air Fryer on a Stable Surface

Ensure the unit is on a flat, heat-safe surface with space around it.

Insert the Basket

Make sure the crisper plate is seated properly with the silicone feet pointing down in the glass basket. Slide the basket into the unit until it clicks.

Power On

Tap the Power button . The display will illuminate and show “----” to indicate the unit is ready.

Select a Function

Tap a cooking function (e.g., Air Fry, Bake). The default time and temperature will appear.

Adjust Time and Temperature (Optional)

Tap the  or  icon, then use the  buttons to adjust.

Shake Reminder (Optional)

For crispier, more even results, the Shake Reminder will alert you to flip or shake food during cooking. You can turn it off before starting or during the cooking cycle by pressing the Shake Reminder button.

Start Cooking

Tap the Start/Stop  icon to begin. The LED display will alternate between time and temperature.

Auto Pause

If you remove the basket mid-cook, the unit will pause and the display will say “out”. Return the basket within 5 minutes to resume, or cooking will be canceled.

Auto Keep Warm

After cooking, the unit will keep food warm for up to 60 minutes unless the basket is removed for over 5 minutes or the unit is turned off.

Store Leftovers

Put the basket lid on the air fryer basket to store leftovers. Be sure the air fryer basket is cool before securing the lid.

Power Off

Tap the Power button  to turn off. Unplug when not in use.

AIR FRYING TIPS & HINTS

• Use Less Oil

A light spray or drizzle is all you need. It helps with browning but keeps things healthier than deep frying.

• Single Layer = Better Results

Spread food out evenly in the basket. Crowding leads to soggy spots and uneven cooking.

• Flip or Shake for Crisp

Use the Shake Reminder to flip or toss food halfway through. It's key for golden, even results—especially with fries, wings, and snacks.

• Cut Evenly

Uniform pieces cook at the same rate. This means no burned bits or undercooked centers.

• Use Silicone Tongs or Tools

To protect the crisper plate's ceramic nonstick coating and keep it in top shape, avoid metal utensils.

• Bonus Tip: Watch the Magic

Use the top viewing window and transparent glass basket with the interior light to monitor progress—no need to remove the basket and lose heat.

AIR FRYER CHART

Use this chart as a quick reference for recommended cooking times, temperatures, and portion sizes for popular foods. For best results, flip or shake food halfway through cooking for even crisping. Smaller portions may cook faster—check progress through the viewing windows. Use a heat-safe baking pan (not included) on the crisper plate for items like baked goods, quiches, or casseroles.

FUNCTION	FOOD ITEM	AMOUNT	TIME	TEMP	PREHEAT	SHAKE/FLIP
Air Fry	Breaded cutlets	up to 4 cutlets, 1 to 1½ pounds	20 min	375°F	-	Flip
Air Fry	Salmon	up to 4 fillets (4 ounces each)	10 min	375°F	-	-
Air Fry	Shrimp	up to 1 pound	8 min	370°F	-	Shake
Air Fry	Bacon	up to 6 slices	8 to 10 min	400°F	-	Flip
Air Fry	French fries	1 pound	20 min	425°F	-	Shake
Air Fry	Wings	1½ pounds	30 min	400°F	-	Shake
Air Fry	Frozen snacks	-	10 to 20 min (depending on item)	400°F	-	Shake
Bake	Cake	6-inch round pan	25 min	325°F	✓	-
Bake	Dinner rolls	up to 6 rolls (baked directly on the crisper plate, or inside a baking pan)	10 to 15 min	350°F	✓	-
Bake	Chicken, whole	up to 4 pounds, cooked directly in the air fryer basket (without the crisper plate); or spatchcocked cooked on the crisper plate	55 min	350°F	-	-
Bake	Chicken drumsticks	up to 3 pounds	20 to 30 min	375°F	-	Flip
Bake	Corn on the cob	up to 4 ears	20 min	350°F	-	Shake
Broil	Melted cheese topping	on top of casseroles or sandwiches	3 to 5 min	450°F	✓	-

TROUBLESHOOTING

Operation	Why won't my unit turn on?	Make sure your unit is plugged into a functional outlet.
		Make sure the air fryer basket is securely in place in the unit.
		Call Consumer Service at 1-800-726-0190 .
	Unit pauses unexpectedly.	The basket may have been removed during cooking. Reinsert within 5 minutes to resume.
Cooking	Why are fried foods not crispy or fried evenly?	Some foods may require more oil than others. If not crispy enough, lightly spray, brush, or rub more oil on the food.
		Make sure food is spread evenly in a single layer in the air fryer basket with no overlap. If food still overlaps, toss or flip food halfway through cooking cycle; use the Shake Reminder for an audio alert.
		Put the food in for additional cooking time. Make sure to check frequently until food reaches desired brownness.
	Why is my food undercooked?	If you put too much food in the air fryer basket, it may not cook in the suggested time. Try using smaller batches of food and single layers, rather than stacking food items on top of each other.
		If the temperature is too low, the food may not fully cook. For air frying, the ideal temperature is around 400°F.
Cleaning	How do I clean tough-to-remove food residue from the air fryer basket/crisper plate?	To remove baked-on grease, soak the air fryer basket and crisper plate in hot, sudsy water or use a nonabrasive cleaner. We recommend hand-washing these parts in hot, sudsy water with a nylon scouring pad or nylon brush and then thoroughly rinsing them, or washing in a dishwasher.
Error codes	Display shows an error.	If the display shows an error (e.g., E1, E2, E3), unplug the unit and contact Customer Service at 1-800-726-0190.

BEYOND AIR FRYING

This air fryer does more than just air fry. With versatile cooking functions, you can bake, broil, recrisp, and keep food warm—all in one appliance.

Tips for Non-Air Fry Functions:

Bake - Great for muffins, cakes, and casseroles. Use a heat-safe baking pan (not included) placed on the crisper plate.

Tip: Reduce recipe temperature by 25°F to 50°F for best results.

Broil - Use for melting cheese or crisping the tops of dishes. Includes preheat for optimal results.

Keep Warm - Automatically activates after cooking to hold food at serving temperature for up to 60 minutes.

Recrisp - Perfect for restoring crunch to leftovers like fries, pizza, veggies, and more without overcooking.

General Cooking Tips:

- Start checking food 5 to 10 minutes before the end of the suggested time.
- Always use oven-safe cookware.
- For best results, monitor food through the viewing window and glass air fryer basket, and use the interior light.

CLEANING AND MAINTENANCE

Keep your air fryer performing at its best with these simple steps:

- Always unplug the unit and let it cool completely before cleaning.
- **Exterior:** Wipe with a damp cloth. Avoid abrasive cleaners, scouring pads or cleaning detergent sprays.
- **Interior:** Use a soft sponge or cloth with mild soap. Rinse and dry thoroughly.
- **Glass Air Fryer Basket, Storage Lid & Crisper Plate:** All of the accessories are dishwasher safe. You can also hand-wash with warm, soapy water and a nonabrasive brush or sponge.
- Avoid metal utensils or harsh scrubbing tools that may damage the crisper plate's nonstick surface.
- Do not immerse the main unit in water or any liquid.
- Remove the crisper plate from the basket for easier access to clean the bottom.

- **Service:** Any repairs should be return the appliance to the nearest Cuisinart Repair Center for examination, repair, or electrical or mechanical adjustment.

Limited Warranty

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart (“Cuisinart”) warrants that the Cuisinart® ClearView 4-Qt Glass Basket Air Fryer (“Product”) will be free from material defects in materials and workmanship under normal home use conditions for a period of ONE (1) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for Hong Kong consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of God or other events beyond Cuisinart's control;
- Damage caused by you or any nonauthorized third party, even though necessary repairs and maintenance might be performed by any company;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated.

This Cuisinart appliance is guaranteed for domestic consumer use for one year warranty.

Within 1 year from the date of your purchase, and under normal circumstances, if there is anything wrong with the quality or parts of the product, Cuisinart Hong Kong Customer Service Center will provide you with one-year repair service for free.

To obtain this warranty service, please remember to keep the original purchase receipt.

Note: The warranty does not cover any accessories such as glass lid and water reservoir etc. It also excludes all products that are misused, not handled according to instructions, accidentally damaged, missing parts, and self-modified products.

Thakral Corporation (HK) Ltd Customer Service Center:

Unit B, 13F, Chuan Kei Factory Building 15 Kin Hong Street, Kwai Chung, N.T. Hong Kong

Customer Service Hotline / Whatsapp:

(852) 9855 2916

California residents only

The Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, LOSS OF GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

Conair LLC

1 Cummings Point Road

Stamford, CT 06902

1-800-726-0190

[illegible]

©2026 Cuisinart, a division of Conair LLC
7475 North Glen Harbor Boulevard
Glendale, AZ 85307

26CE201217

IB-19117-ESP